


Instructions


Cleaning Cards are used to clean the output cutter wheel that cuts between each label or at the end of a group of labels. If the cutting wheel cuts through continuous adhesive-backed paper (such as IColor 250 digital die-cutting media), it can accumulate adhesive build-up that will eventually cause cutting problems.

Recommended Cleaning Intervals

For the IColor 250, it is recommended every 2000 Labels. The UNINET IColor PrintHub software keeps track of this and will alert you when cleaning is necessary. For other printers, cleaning is only necessary if you regularly cut through adhesive or if you receive a cutter stall error.

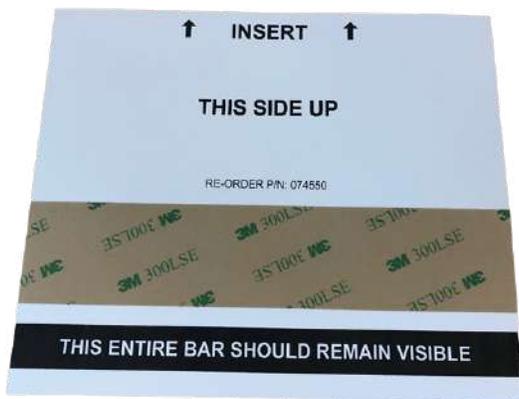

- 1 Locate the cleaning card

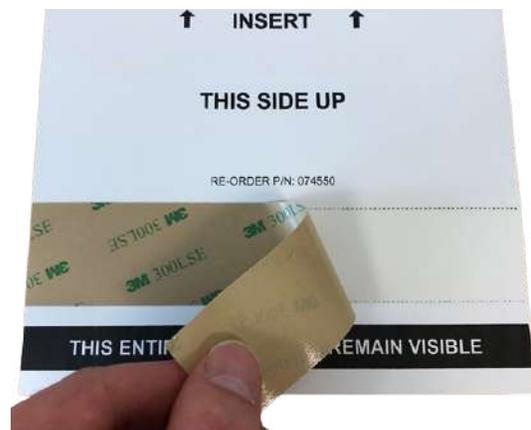

- 2 Peel off the protective strip covering the adhesive.



- 3 Unload label stock from the printer. Insert the cleaning card into the front output of the printer.



- 4 When the exposed adhesive strip is aligned with the output cutter path, open UNINET IColor PrintHub / Select Printer Settings /Advanced. Click on Output Cutter Cleaning. Once the cutter cycles, remove both parts of the card from the printer.