

## OPERATING INSTRUCTIONS – JP5MUG

Follow the following steps for set up and operation:

1. Make sure power cord is pushed in completely into the back of the heat press.
2. Turn the heat press on by flipping the red switch on the front of the heat press.
3. Turn on individual heating stations by pushing its corresponding green button.
4. Select the MODE button for each station individually and use the arrow buttons to adjust the temperature. Select MODE again to save the temperature changes made.
5. Select the MODE button for the single timer and use the arrow keys to increase or decrease the time using seconds. Select MODE again to save your time changes.
6. Open the individual stations by pushing the blue handle backwards and load your mug into the station with the handle centered in the opening.
7. Use the black knobs to individually set each stations pressure and close the individual stations by pulling the blue handle forward until locked in place.
8. Once all mugs are secure, press the green timer button to start the universal timer. This will prompt the timer to start counting down and will beep once complete.
9. Hit the green timer button again to stop the beeping and remove mugs by opening each station's blue handles. (Caution: Mugs will be hot!)

**Note:** Check our website for setting recommendations for your specific product. Enter the part number in the search bar and select the Tech Docs/Downloads tab.

