

SUBLIPRO SUBLIMATION WRAPS

patent US D827,023 S

Overview

An ever growing market for containers, drink ware, mugs, cups, bottles and glasses are creating a recent rise in demand for sublimation equipment. As an inexpensive and more flexible alternative to a mug press, HIX has developed the Mug Wrap which works in conjunction with any of its SubliPro Counter top or Conveyer ovens.

Our wraps provide a quick snap-on solution. Simply position and tape your artwork to virtually any type of round drink ware. Next, wrap substrate and artwork with the designated HIX "Snap" Wrap. That's it! You are ready to sublimate! Use a HIX SubliPro oven to apply heat and activate the sublimation process.

The advantage of the HIX "Snap" Wrap is its patented tool-less clasping technology. No other mug wrap on the market is as easy to apply or remove. Eliminate fumbling with awkward closing mechanism or wrenches; no need for a third hand while attempting to close a wrap with screwdrivers or other tools. Your two hands are all you need.

HIX "Snap" wraps open and close with a simple ... snap. The unique 2-step locking mechanism - a beauty in its simplicity - securely closes the wrap around substrates with or without a handle (for 360 degree coverage). At the same time, it provides a snug fit for the artwork on the substrate.



small shot glasses.



SUBLIPRO SUBLIMATION WRAPS

Mraps

Specifications

Mug Type	Mug Height	Mug Diameter(s)
4 inch straight wrap	4 3/4"	3 3/8"
3 inch bowl wrap	3"	7 ½"
2 inch bowl wrap	2 ½"	6"
4 inch tapered wrap	4"	2½" / 3.6"
6 inch tapered wrap	6"	2.4" / 3 ½"
2 inch tapered wrap	2.3"	1.4" / 1.93"
8 inch straight wrap	8 3/8"	2.8"

9 Ali ne ver




Align - Hold the substrate next to the clasp and center it vertically on the wrap.



Insert - Close the buckle clasp by inserting the prong through the loop.



Close - With two hands, squeeze the clasp together until the clasp fastens.

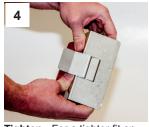

Tighten - For a tighter fit on some substrates, squeeze again to reach the second clasp.



Release - Press down on the clasped prong with thumbs while lifting up on the loop with forefingers.



Remove - Slide the prong clasp out of the loop clasp to remove the substrate.

Key Features: —

- 2 clasping positions for substrates with or without a handle
- tool-less design for easy latching and unclasping operation
- standard sizes suitable for wide range of substrate options
- replaceable silicone extends the life of the wrap indefinitely
- tapered wraps designed for otherwise difficult truncated substrates, i.e. latte mugs and shot glasses
- pliable silicone provides top to bottom coverage for all over sublimation (excluding around handle and/or inside of the substrate)
- proprietary silicone provides sufficient pressure while remaining flexible enough to easily close.

